




Shapes

Tools & materials required:

- Clean gloves
- Utility knife
- Straight edge
- Measuring tape
- Roller
- Bar level
- Adhesive (optional)

Recommended Pattern Formations:

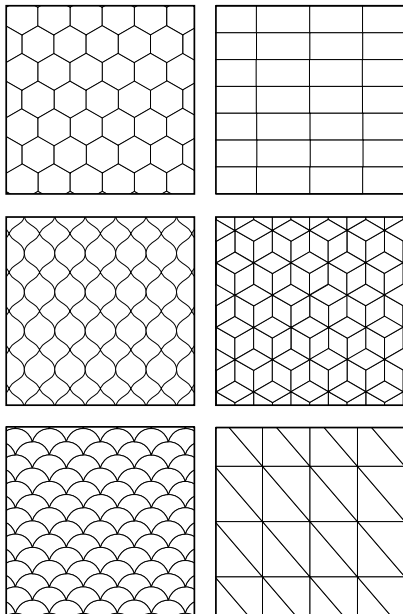

Steps: For Peel & Stick Method

1. Wear clean white gloves throughout the installation process. Use matching caulk to fill in any unwanted cracks.
2. After preparing the wall for installation, use the bar level to dry fit (without adhesive) and measure the desired formation of each shape (see recommended patterns). Ensure they line and match up according to the desired pattern formation. Once they line up, use a pencil to mark out the position of each shape on the wall.
3. Peel off the adhesive cover and carefully place the shape on the wall in accordance with the marked areas. Apply gentle pressure to make sure the edges are properly butted together, if required by the pattern.
4. Apply even pressure with the roller and firmly press the surface of the shape to the wall. Repeat this process for each shape until the installation is complete.
5. If required, use the utility knife and the straight edge to accurately trim off any excess material around joins, pipes, sockets etc.

Note

For additional bonding strength, a construction adhesive may be used. Special attention must be made to ensure the adhesive is evenly and thinly spread to allow for a flush finish.