

This guide is presented in good faith to assist in the direct fix installation of Fuji tiles. It is not intended as an all-encompassing guide, and a professional qualified installer is recommended for optimum results.


Woven Image accepts no responsibility for installation actions taken or not taken. Please refer to Woven Image Pty Ltd. Terms of Trade.

This installation guide contains only recommendations; if you have any questions about installation techniques please contact your distributor or Woven Image sales representative.


Please note:

- Please check your order is correct and from the same batch number (if requested).
- No claims will be accepted after the product has been installed.
- Fuji's acoustic performance will alter based on a variety of factors including, tile size and the spacing between them.

FUJI BOX CONTENTS

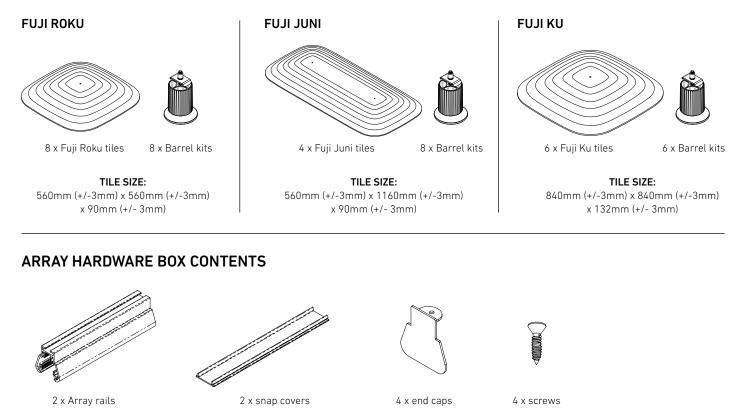

TOOLS REQUIRED

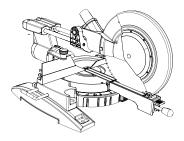

Drop saw



Drill + Allen key head drive

Measuring tape


Spirit & Laser levels

For product specifications please visit wovenimage.com



Step 1

 Once your product is delivered, please ensure your order is correct and undamaged. Prepare area and lay out all components for use.
We recommend you use professional qualified installers. Please contact Woven Image for recommendations.

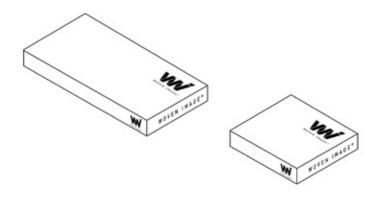


Step 2

• Ensure the spacing between parallel rails is adequate for your selected tile size. See below for spacing specifications:


FUJI ROKU

- Confirm tile spacing and trim snap covers.
- Nominal distance at 600mm centres.
- 600mm centres of tiles = 594mm snap cover.
- 600mm between holes with 2mm tolerance = 592mm snap cover.

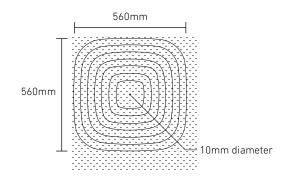


FUJI JUNI

- Confirm tile spacing and trim snap covers.
- Nominal distance at 600mm centres.
- 600mm centres of tiles = 594mm snap cover.
- 600mm between holes with 2mm tolerance = 592mm snap cover.

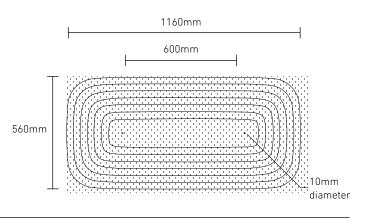

FUJI ROKU

- Confirm tile spacing and trim snap covers.
- Nominal distance at 900mm centres
- 900mm centres of tiles = 894mm snap cover.

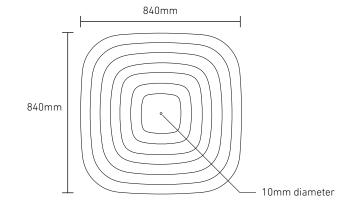


For product specifications please visit wovenimage.com



Step 3


• Prepare area and use a laser level to mark out desired location. Inspect ceiling surfaces and structure to ensure it is free from damage and is structurally fit for installation. Level 3 plasterboard finish for a ceiling is recommended.

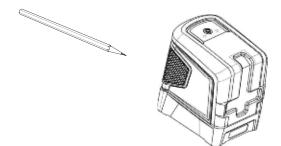

Step 4


- Drill 30mm deep hole.
- Hammer the concrete dowel into the hole.



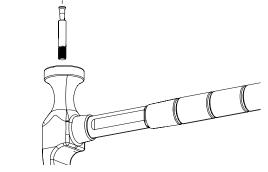

Step 5


• Attach end caps to lengths that will be at an end of a run.

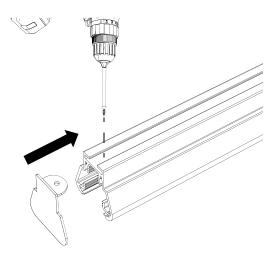

Step 6

• Adjust barrel kit to suit Array profile opening.








Step 7

• Slide barrel kit and snap covers into Array rail.

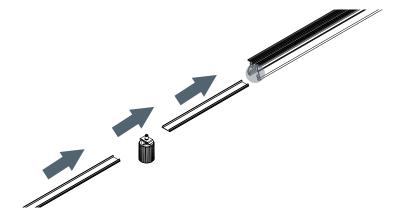


Step 8

• Tighten the barrel to lock it into place.


Step 9

- Remove the button.
- Attach the tile to the barrel using the button thread.
- For faster assembly use a Allen key head with cordless drill to screw the button into location.
- Ensure the drill clutch is set low enough to prevent stripping out the hex recess.

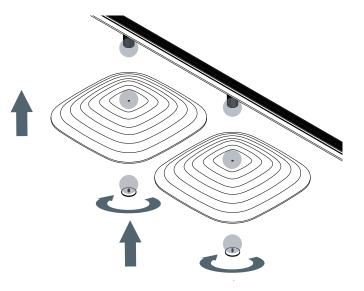

Step 10


• Ensure all end caps are installed.

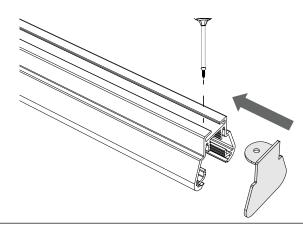




COMPLETED ASSEMBLY

FUJI ROKU

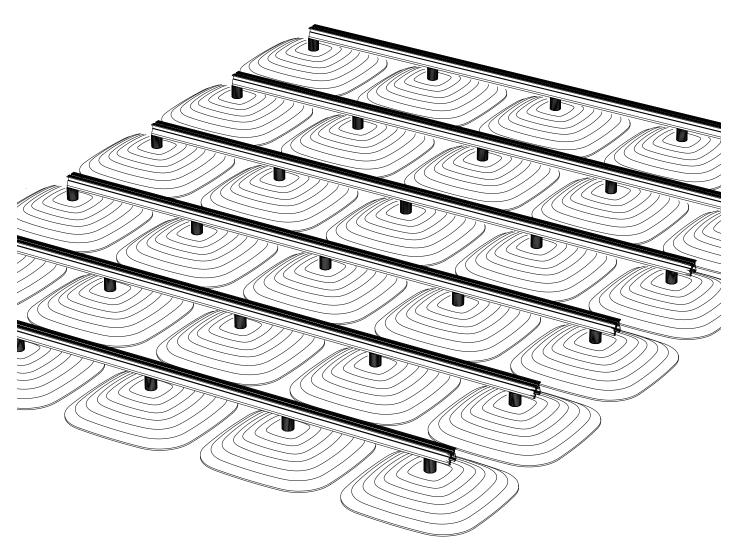



FUJI JUNI

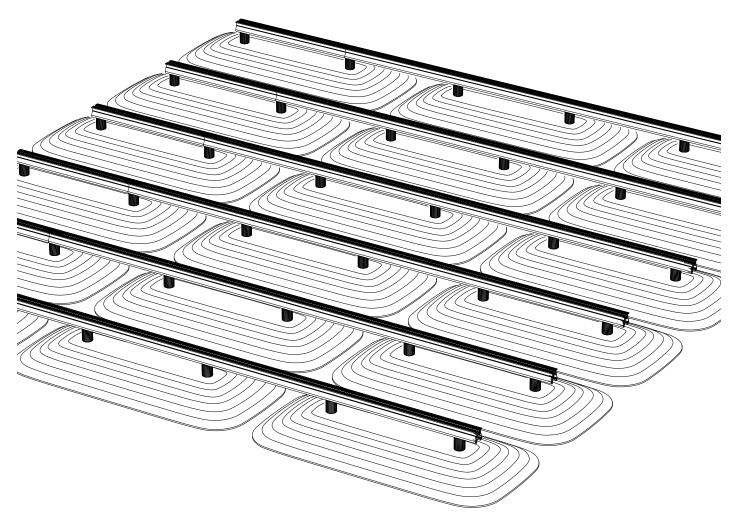



FUJI KU

