


Install the assembly onto the desk top, tightening the clamps enough to stay in place.

Push the Desk Clamps through the cutouts and slide them upwards.

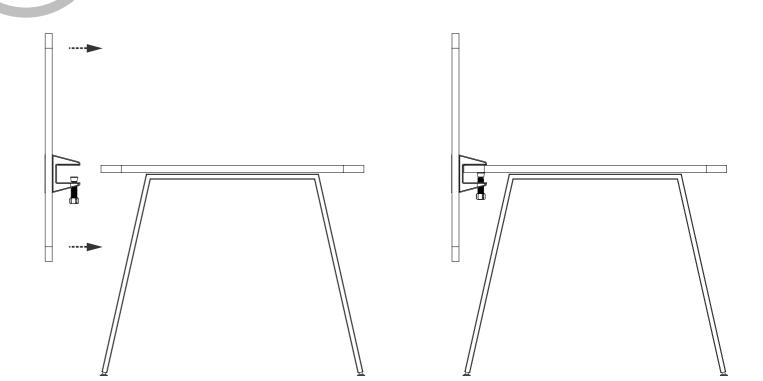


Double check the screen is correctly positioned.







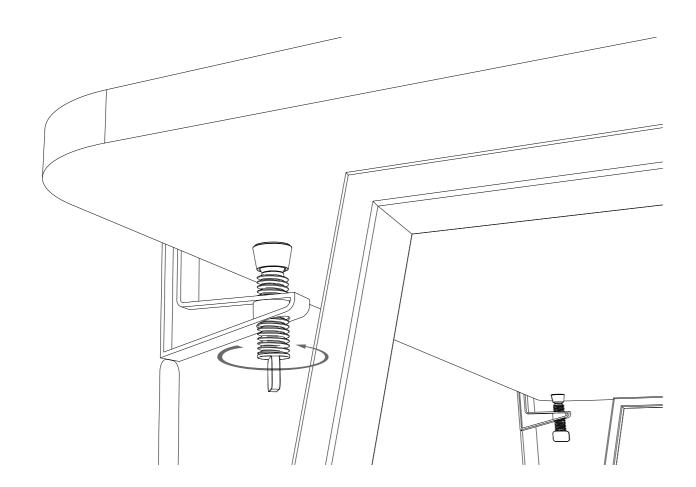



EchoPanel® Adapt Installation Guide

Specification

- Non-woven PET acoustic desk screen
- 1790 mm x 780 mm (Classic)
- 1790 mm x 544 mm (Social)

Contents of box

- 1 EchoPanel® screen
- 2 Desk Clamps
- Installation Guide

Please read these instructions before application.

This guide is presented in good faith to help in the installation of EchoPanel® Adapt.

Woven Image accepts no responsibility for installation actions taken or not taken. This guide contains recommendations and is not intended as an all-encompassing guide, your knowledge as an experienced tradesperson needs to be applied.

A professional qualified installer is recommended for optimum results.

Pre-Installation Requirements

- Please check that all components are the correct colour, shape and same batch number (if requested).
- No claims will be accepted after EchoPanel® Adapt has been installed.
- The clamps should be tested for desk suitability.
- All surfaces must be smooth, clean, dry, dust and mould free.
- Please refer to Woven Image Pty Ltd Terms and Conditions of Trade.

Cleaning & Care for EchoPanel® Adapt

Regular Care

- Protect from direct sunlight.
- Vacuum regularly using low suction and smooth attachment.

Cleaning

- Professional cleaning recommended.
- Do not shampoo clean.

Spot Cleaning

- Treat spills and stains as soon as possible.
- Avoid concentrated rubbing. Use minimal pressure only.
- Gently scrape soil or mop liquid from the surface of the screen.
- Apply proprietary cleaning agents strictly according to instructions.
 Do not saturate EchoPanel® Adapt with water or other cleaning liquids.
- May be spot cleaned with dry cleaning solvent.



wovenimage.com